



Diagram of parts and components of the Modular Panels.

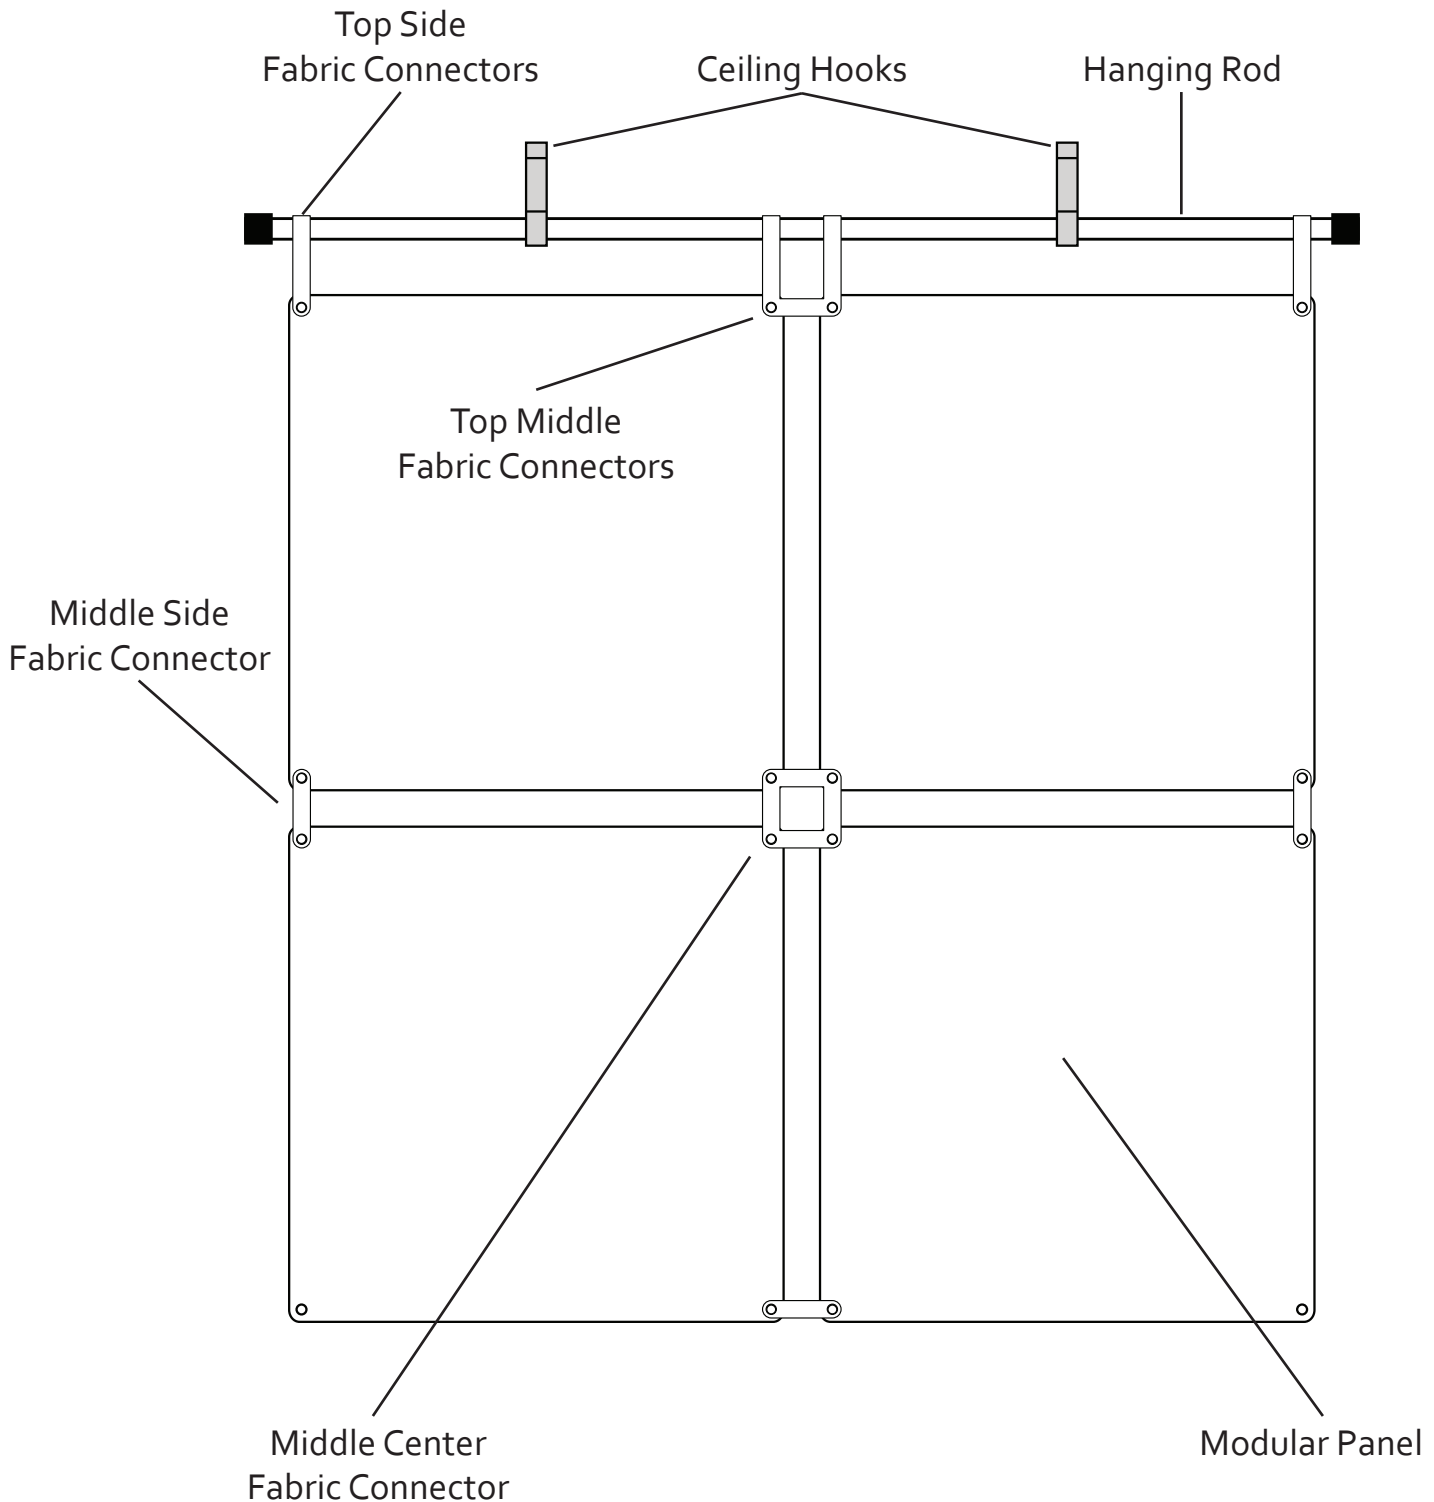


Assembling the Modular Panels.

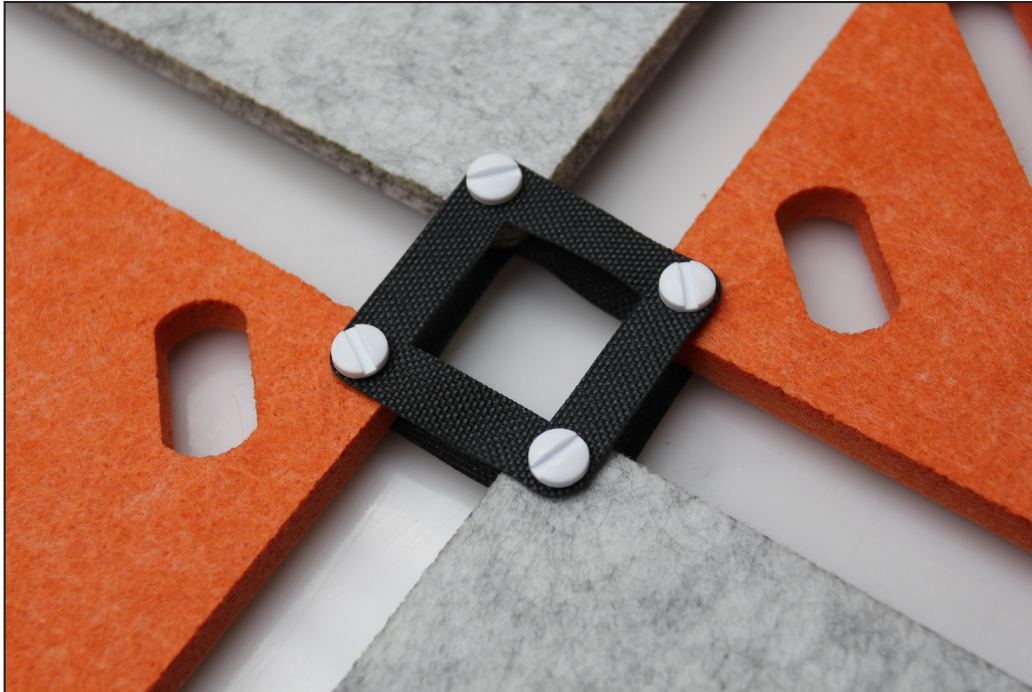

1. To begin assembling the Modular Panels together, start with the open barrel. Place them inside the holes of the fabric connectors. This will be the back side of the assembly.




2. Fit the open barrels and the fabric connectors inside the holes in the corners of the Modular Panels.

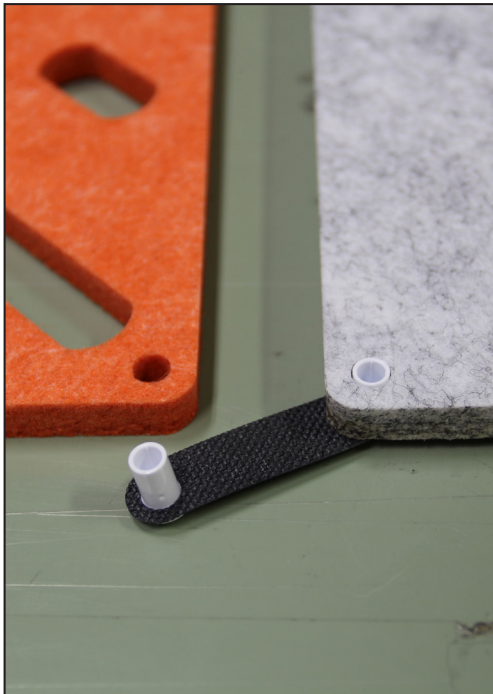


3. Insert the screw side of the barrel into another fabric connector. Place the screw side of the barrel into the open end barrel from the previous step. Don't press the barrel all the way together yet. Be sure not to pinch the fabric connector in between the halves of the barrel. If this happens pull the two halves apart with pliers or two screwdrivers. More pictures of the process is on the following page.



Continued assembly photos from previous page.

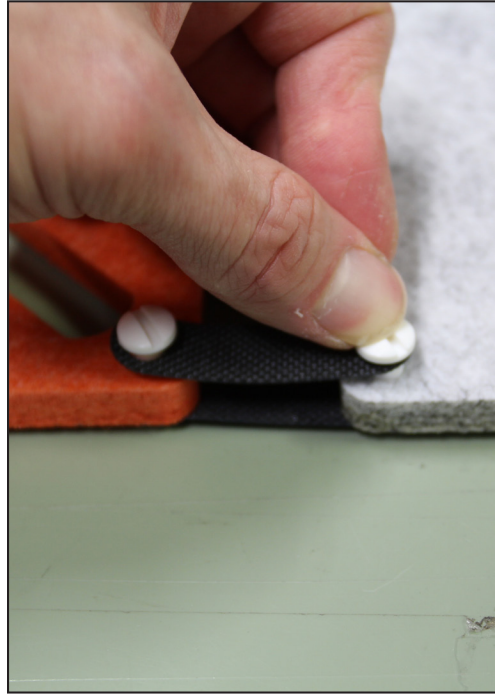

4. Using a hard flat object, push the barrels together. Leave a small gap between the two halves so the fabric connectors have the ability to move.

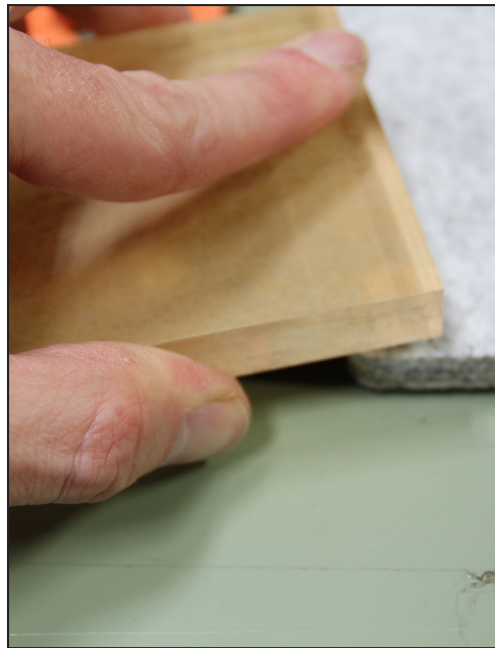

Congratulations, you have finished assembling your new Modular Panels.